
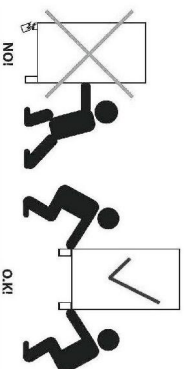




PROMI

PKSZ107

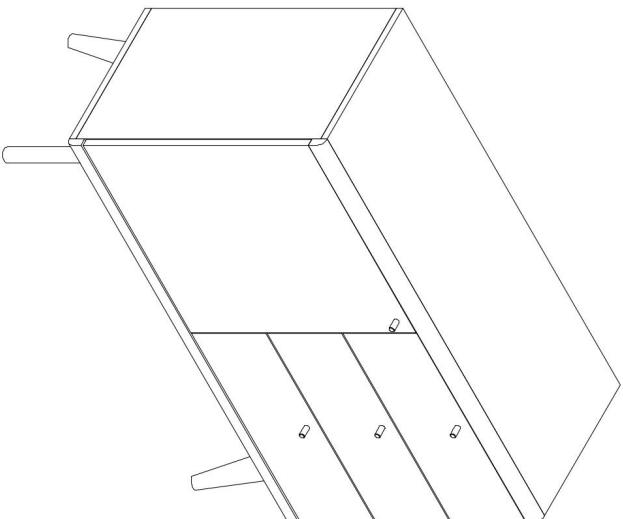


13.4.2017

- (D)** Montageanleitung
- (FR)** Notice de montage
- (NL)** Handleiding voor de montage
- (CZ)** Montážní návod
- (HU)** Szerelési útmutató
- (TR)** Montaj talimatı
- (GB)** Assembly Instructions
- (IT)** Istruzioni di montaggio
- (PL)** Instrukcja montażu
- (SK)** Návod na montáž
- (RO)** Instrucțiuni de montaj
- (RU)** Инструкция по монтажу

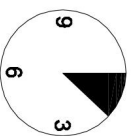
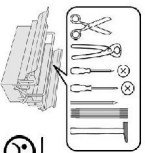


20 min.



1

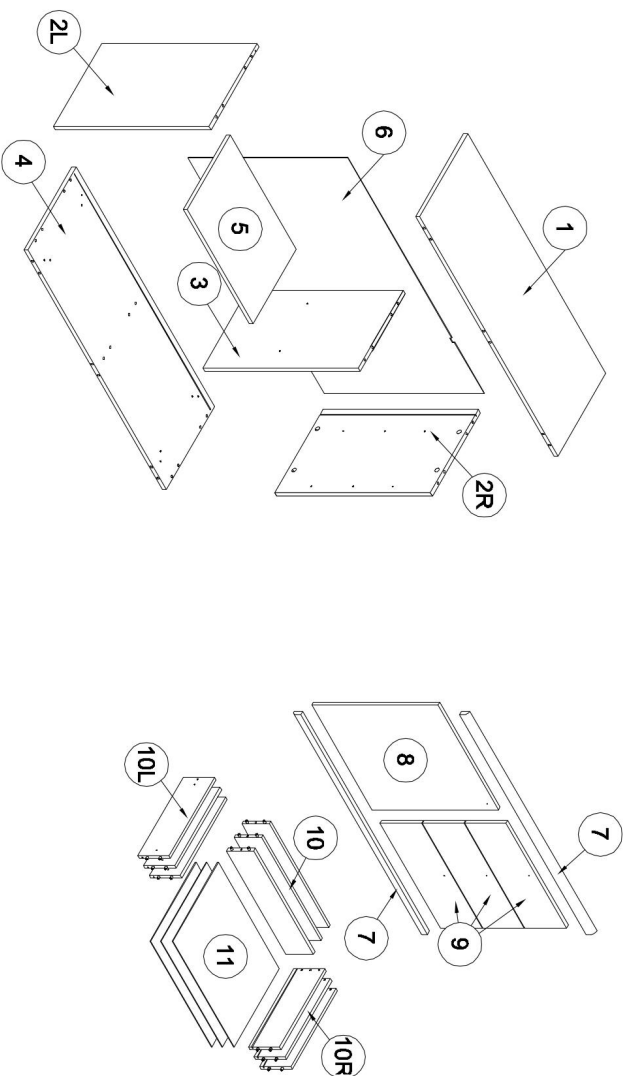

TB X1 	N 3x20 X4 	HD X8 	TA X1 	Z X4 	V 3x13 X18 	GLUE X1 	X X12
B X18 	A 8x32 X4 X18 	R X2 	H 6.3x13 X4 	NA 4x13 X4 	PPW X6 	PC X2 	M M4x22 X4
NGD X4 	C X18 	Z X18 	ND 3.5x16 X13 	W3 X4 			

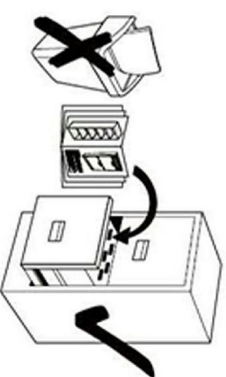
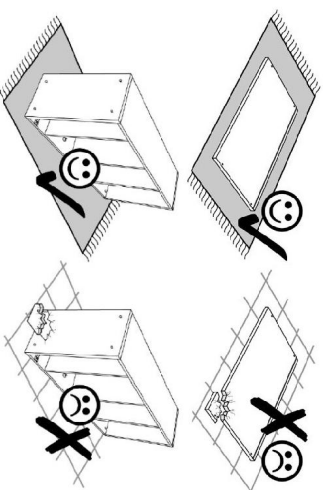


2

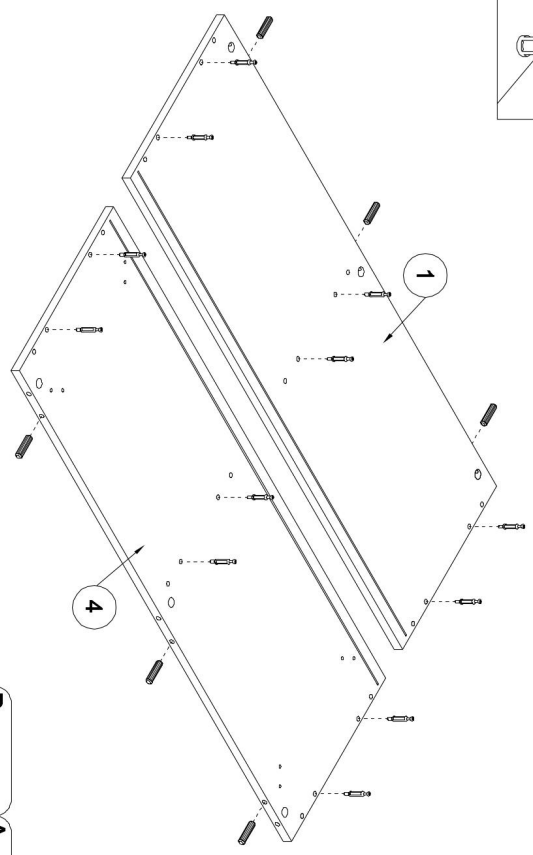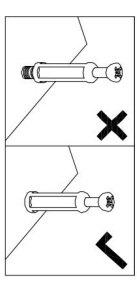

3



- A** 8x32
x6
- B** 8x32
x12

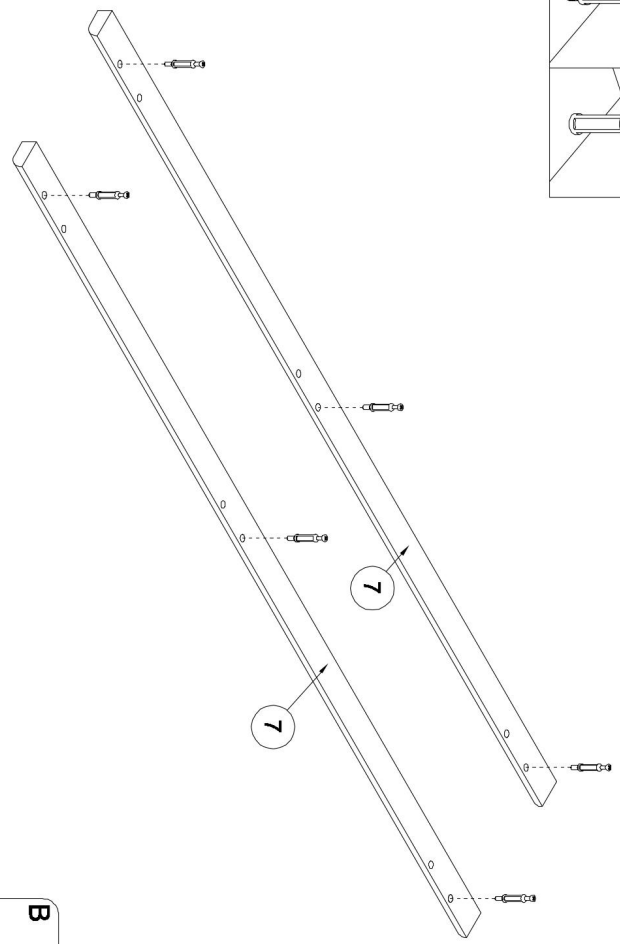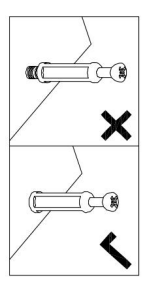

4


- B** 8x32
x6

- A** 8x32
x12
- K** 8x32
x2
- H** 6,3x11
x4
- ND** 3,5x17
x12
- PPW**
x6


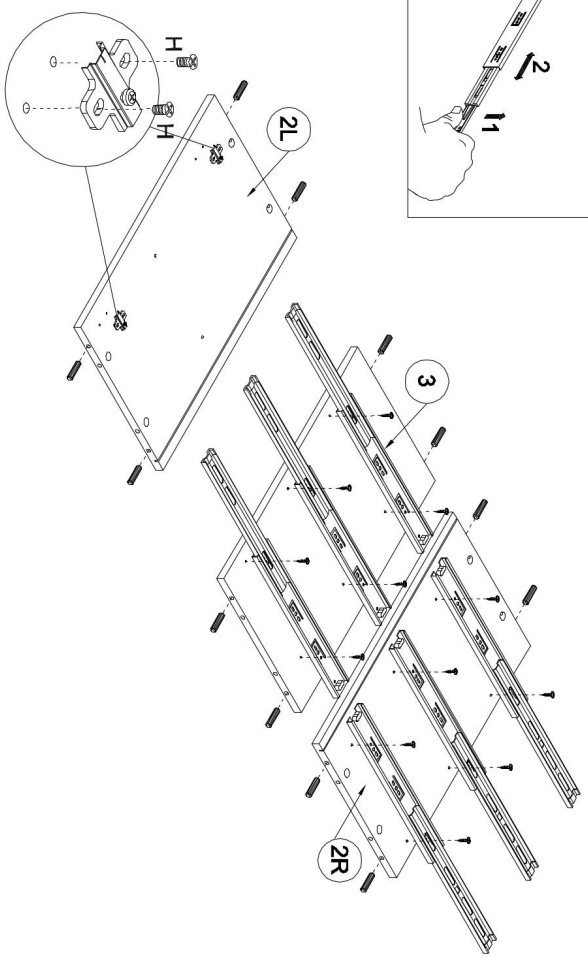
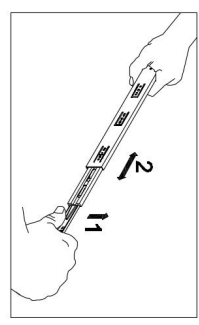


5





- NA** 4x13
x4
- W3**
x1
- PC**
x2
- M** M4x22
x1

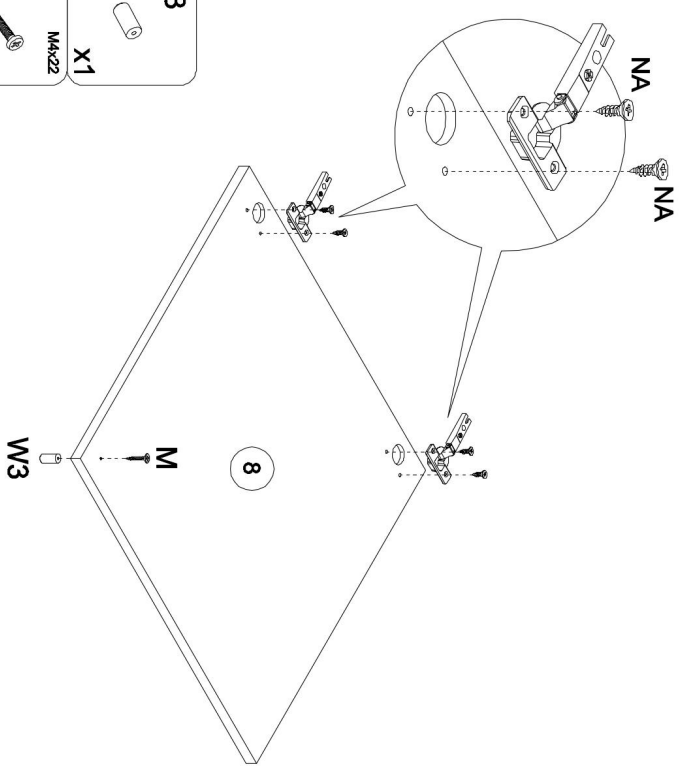


6

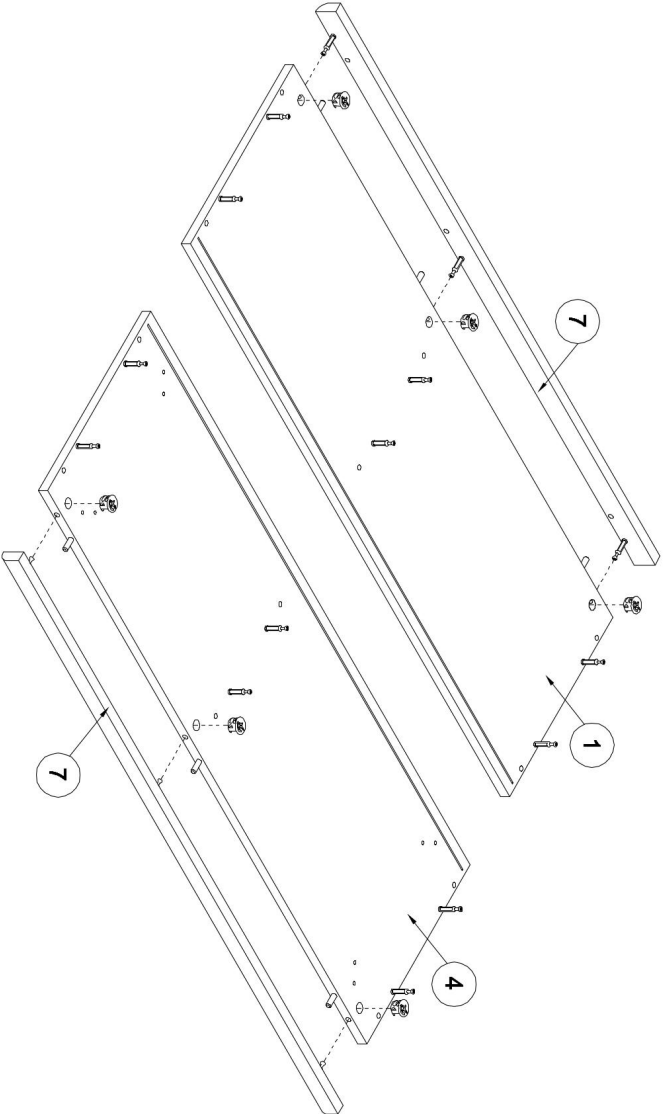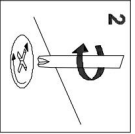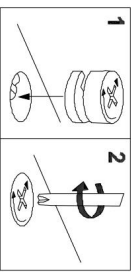


7

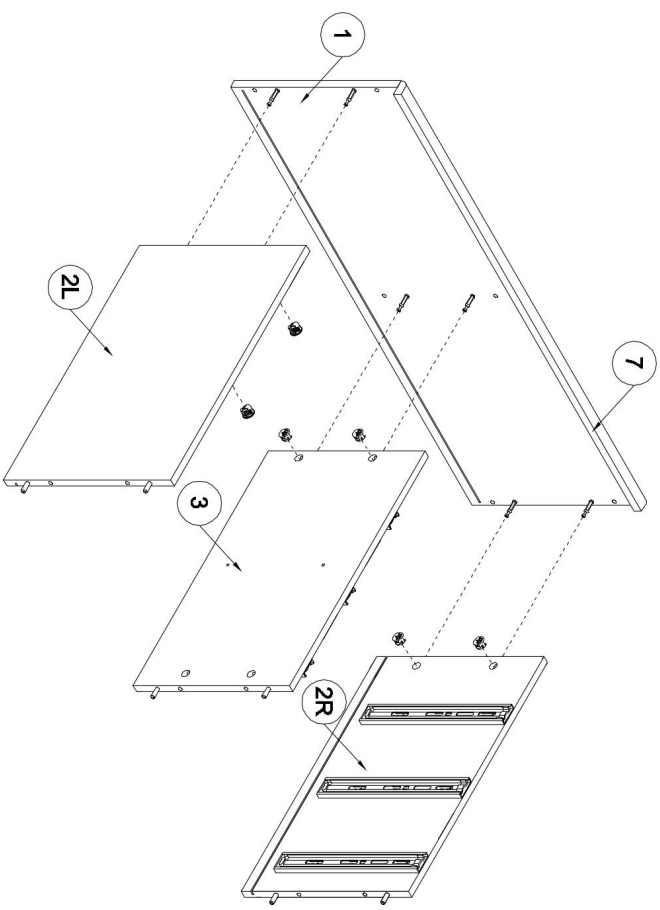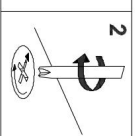
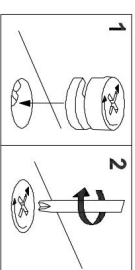
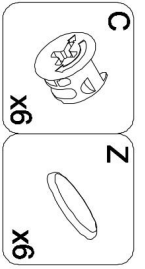


8


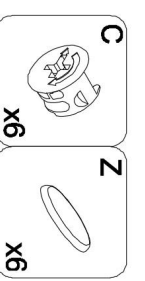


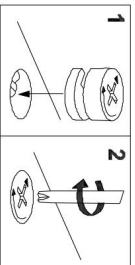


9

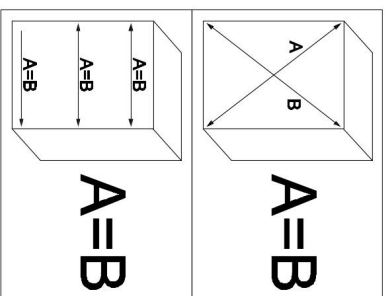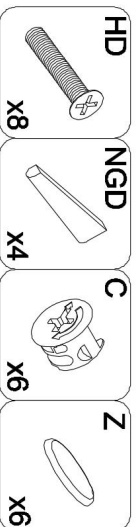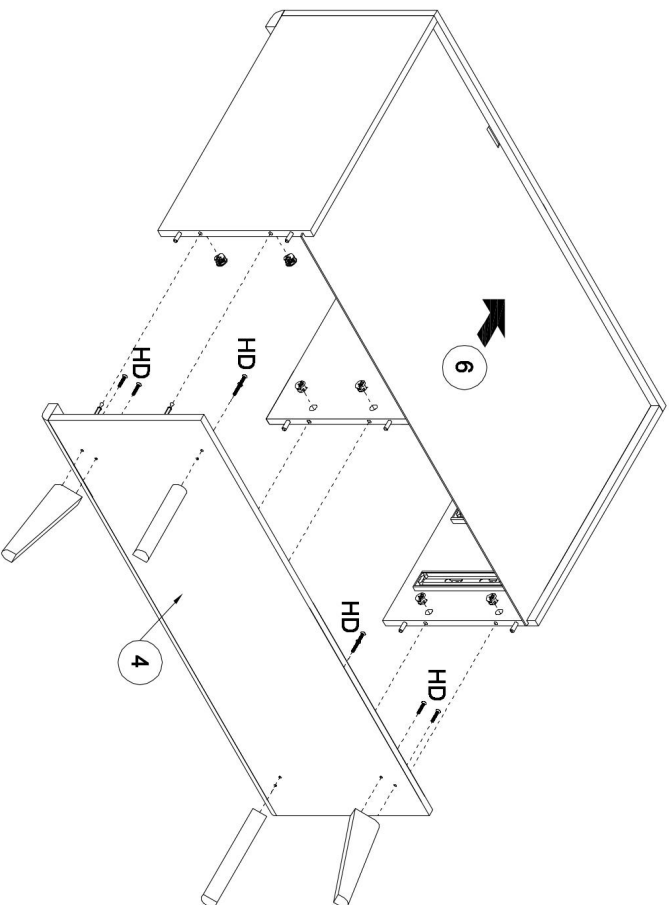


10

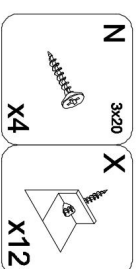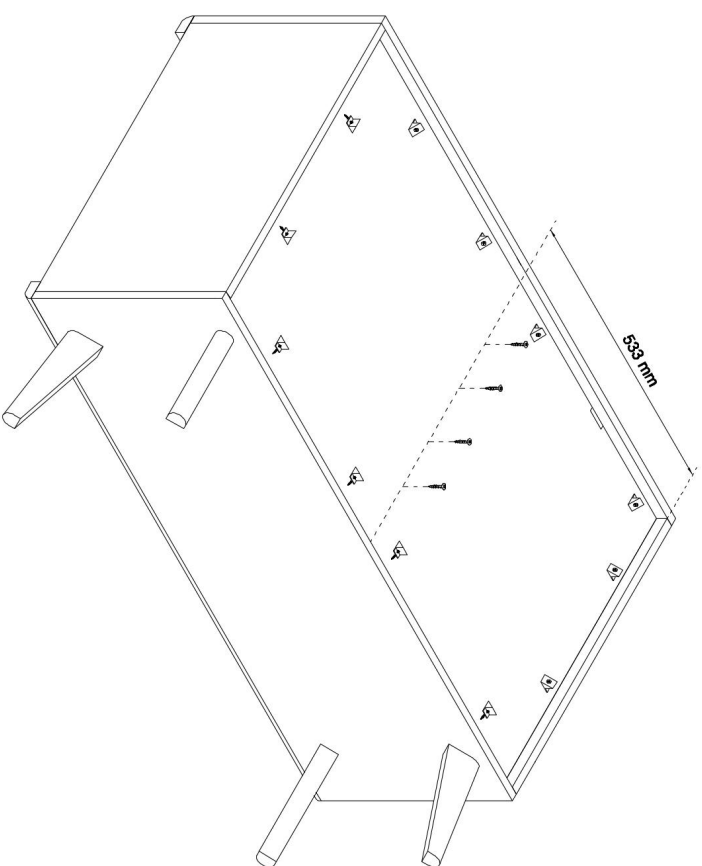


11

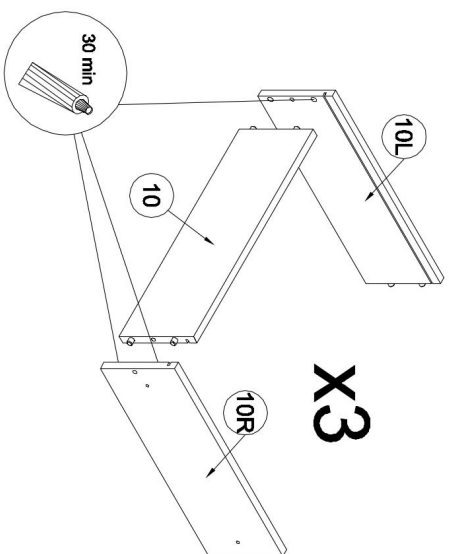

X3




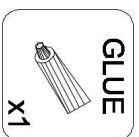





12

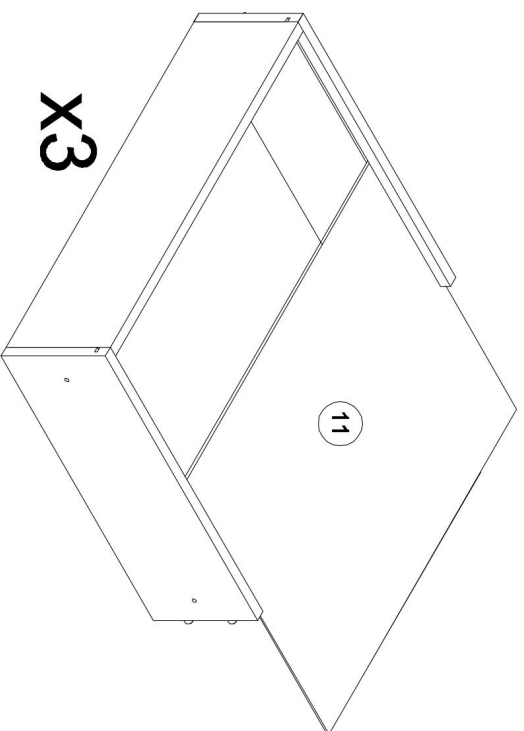

X3

13

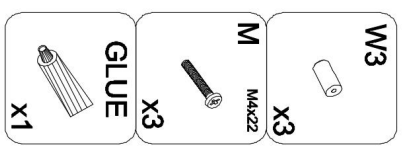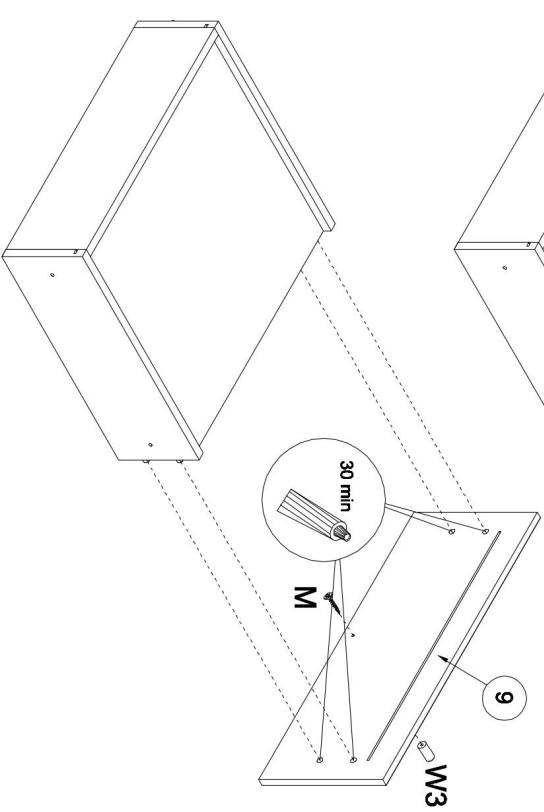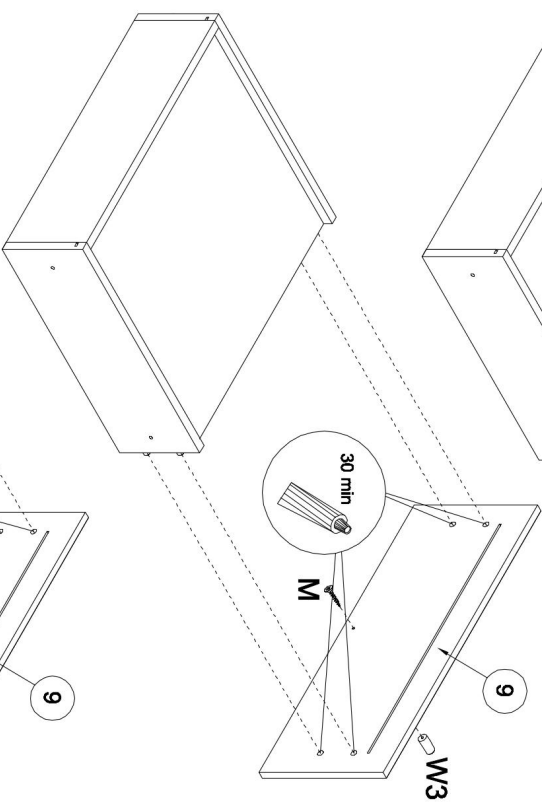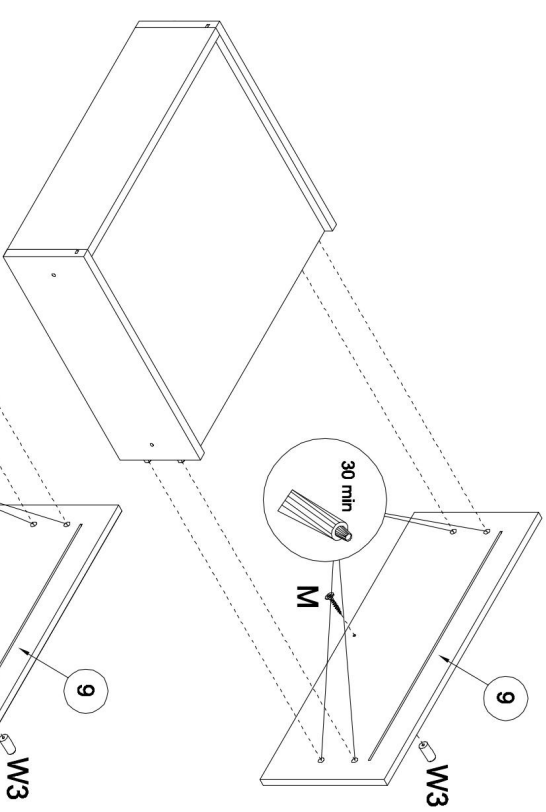

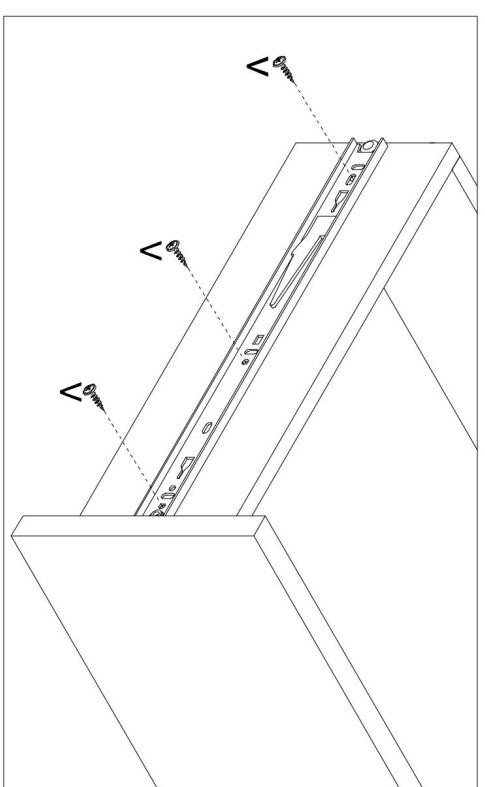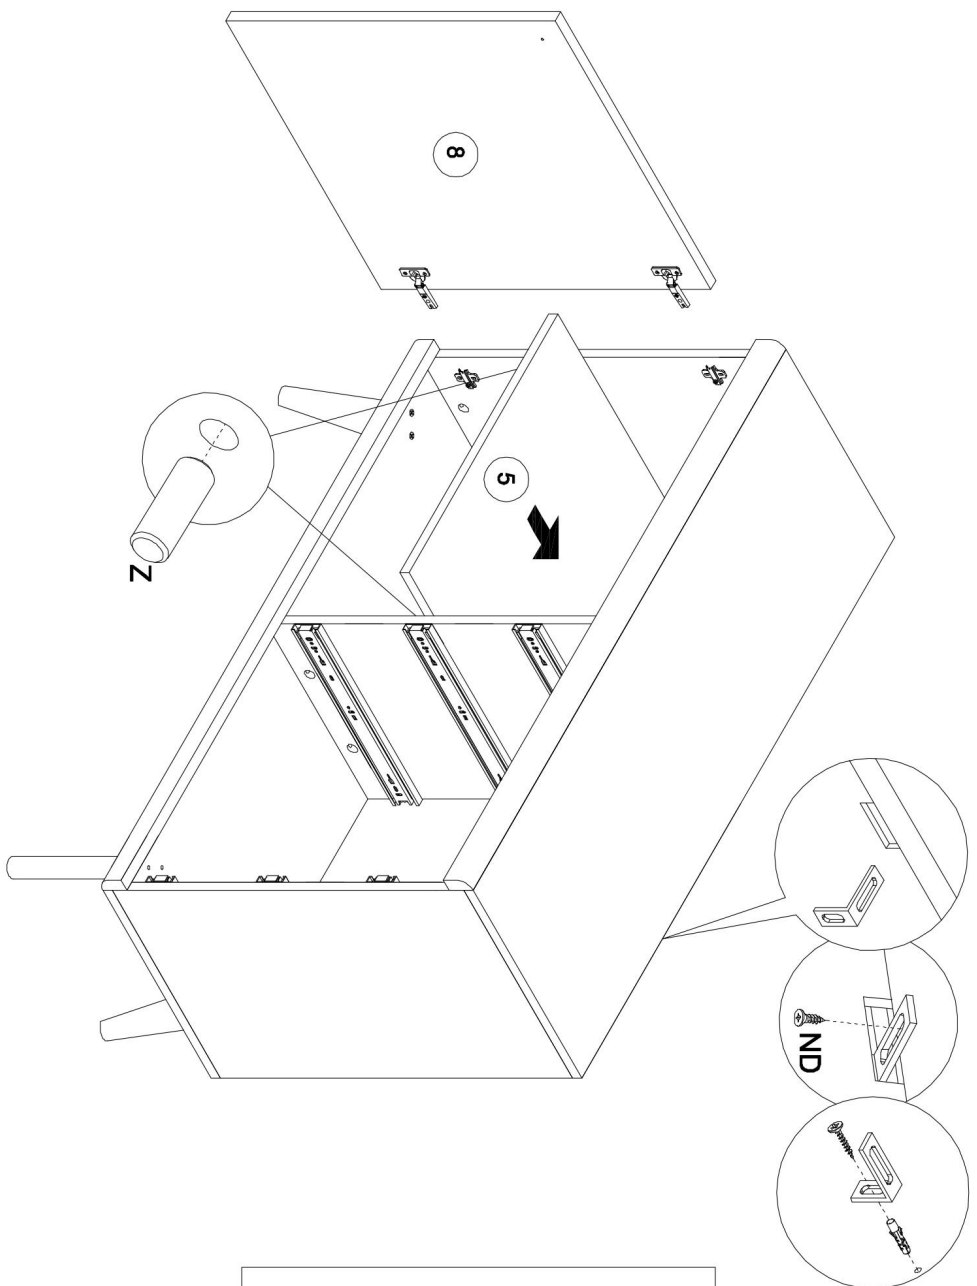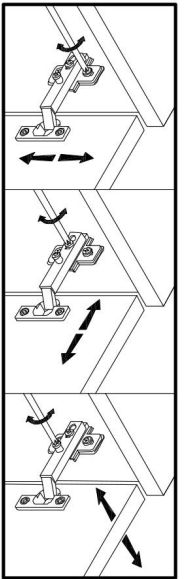

- TB x1
- TA x1
- Z x4
- V 3x13 x18
- NID 3.5x16 x1

