

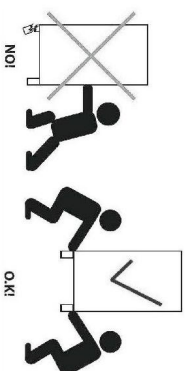
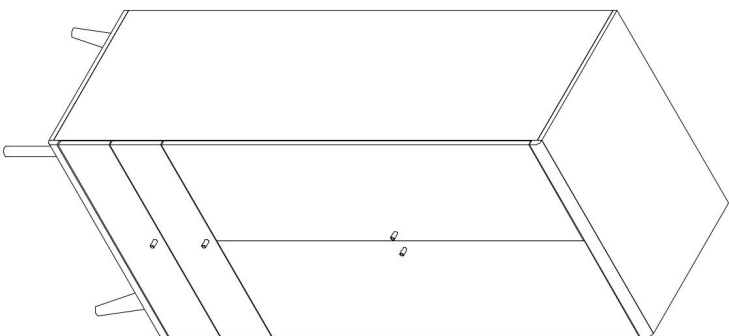


PROMI PSZ80

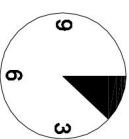


19.5.2017

- D** Montageanleitung
- FR** Notice de montage
- NL** Handleiding voor de montage
- CZ** Montážní návod
- HU** Szerelési útmutató
- TR** Montaj talimatı
- GB** Assembly Instructions
- IT** Istruzioni di montaggio
- PL** Instrukcja montażu
- SK** Návod na montáž
- RO** Instrucțiuni de montaj
- RU** Инструкция по монтажу


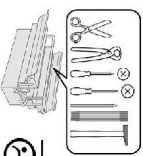


20 min.


1

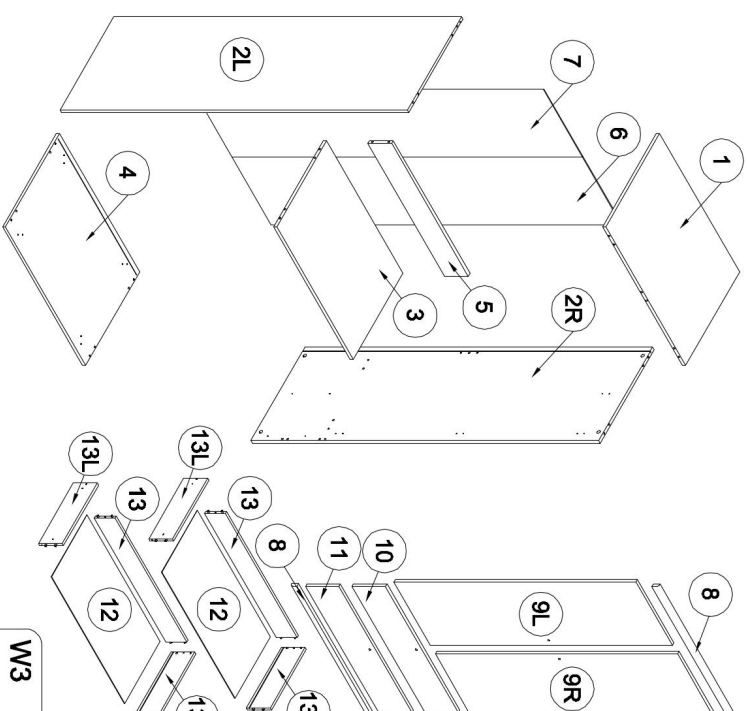


S L-1738mm X1	NA 4x13 X13	TA X1	TB X1	PC X6	HD X8	NGD X4	X X10	M M4x22 X4	N 3x20 X6	ND 3.5x16 X4	W3 X4	V 3x13 X12
W6 L-760mm X12	PPW X1	GLUE X4	B X20	A 8x32 X22	T X2	H 6.3x13 X12	R X6	C X18	Z X1			

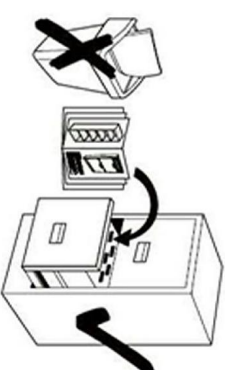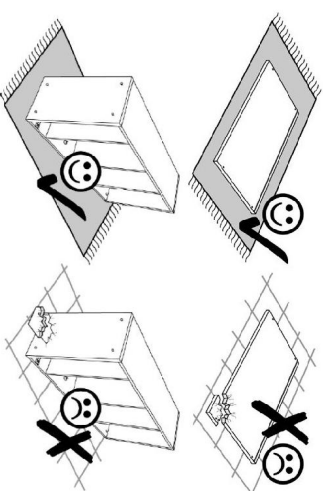

2

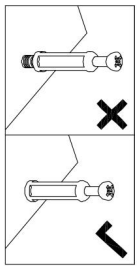


3


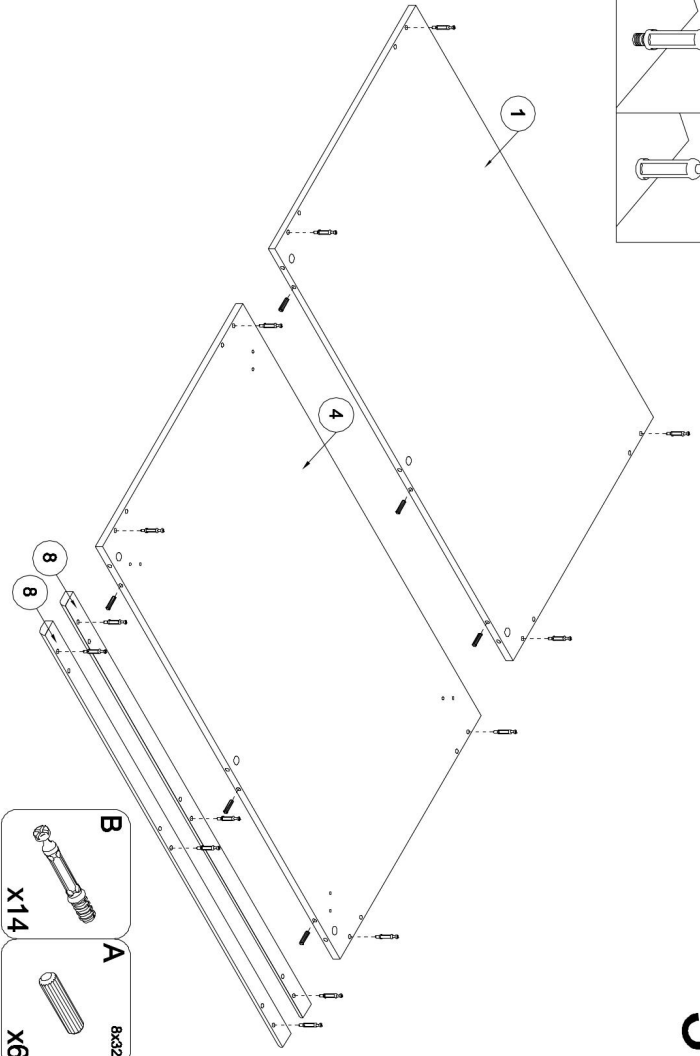


- B** 8x32 x14
- A** 8x32 x6


4

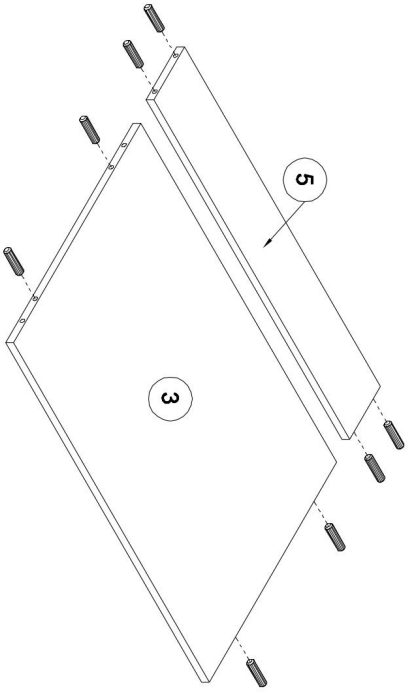




- A** 8x32 x8

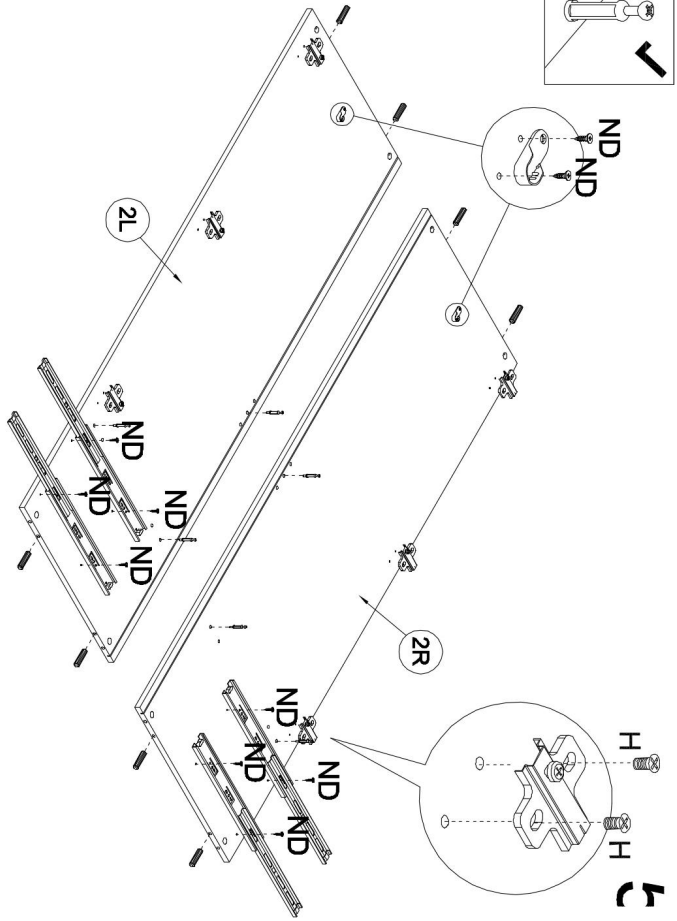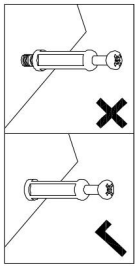

- H** 6.3x13 x12
- A** 8x32 x8
- R** x6
- B** x6
- T** x2
- ND** 3.5x16 x12
- PPW** x4

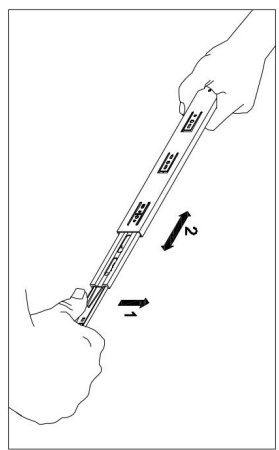


5

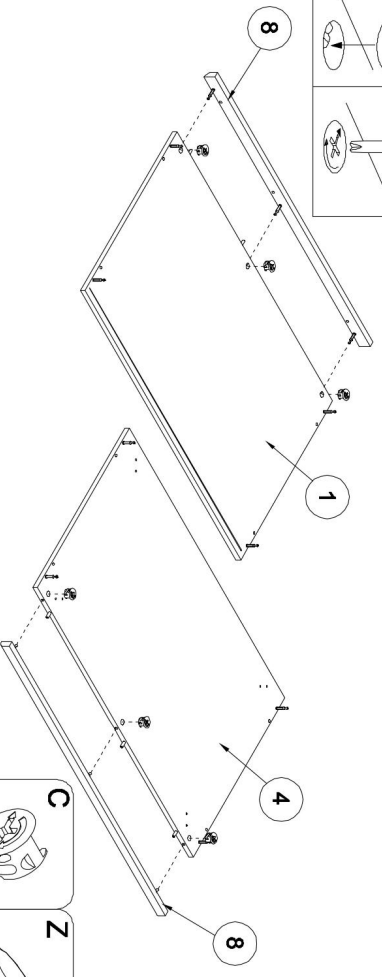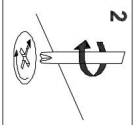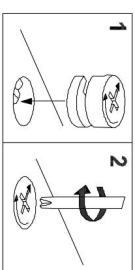


- C** x6
- Z** x6

6


7

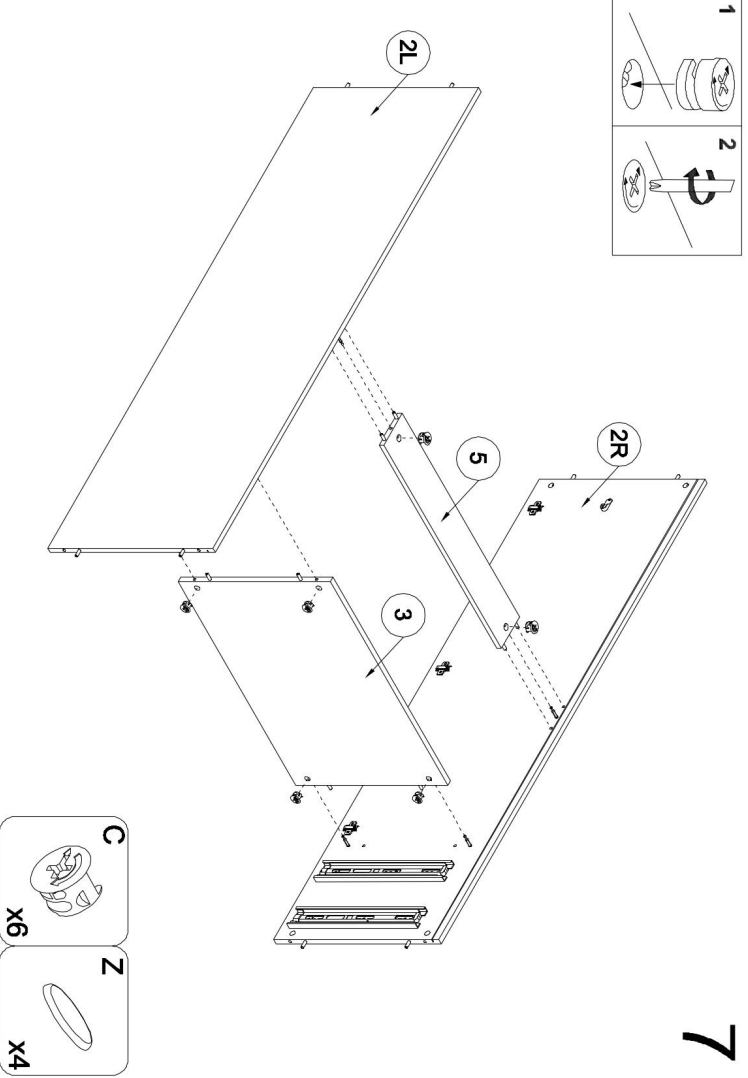


5

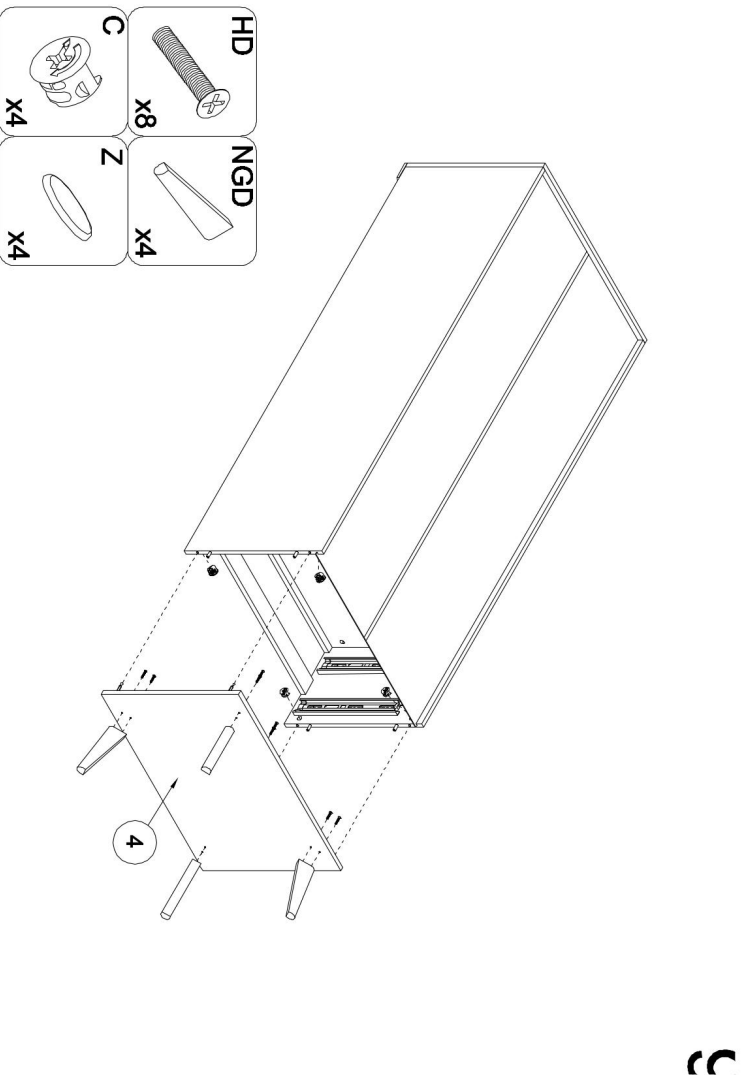


8

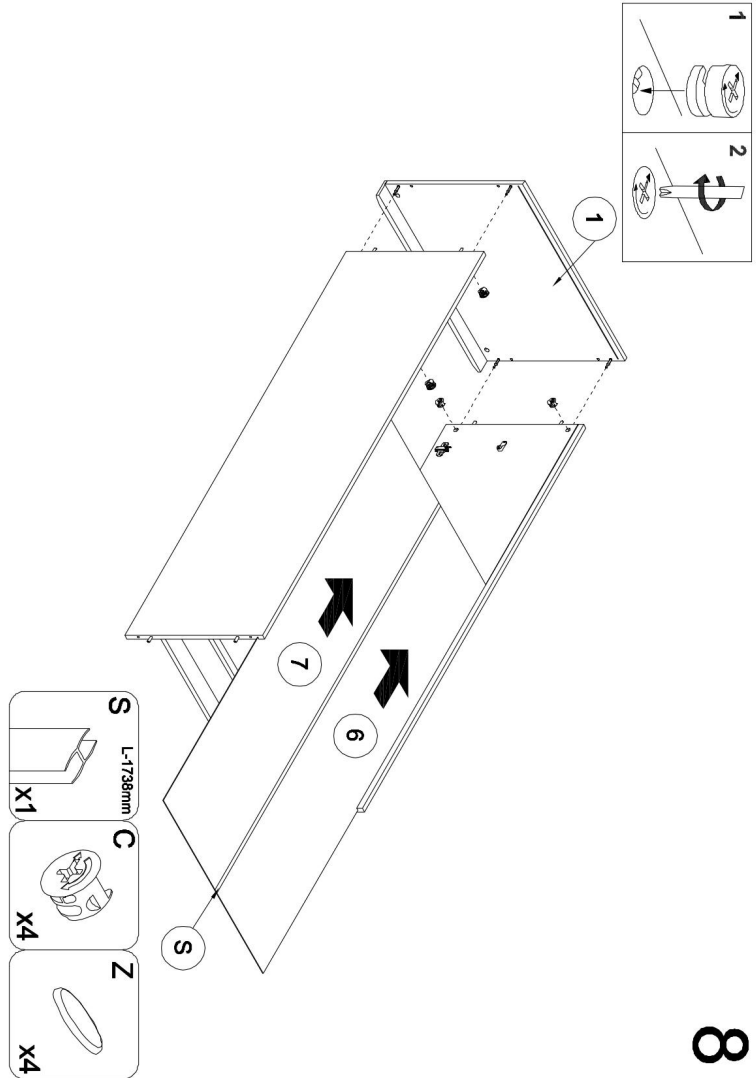

10

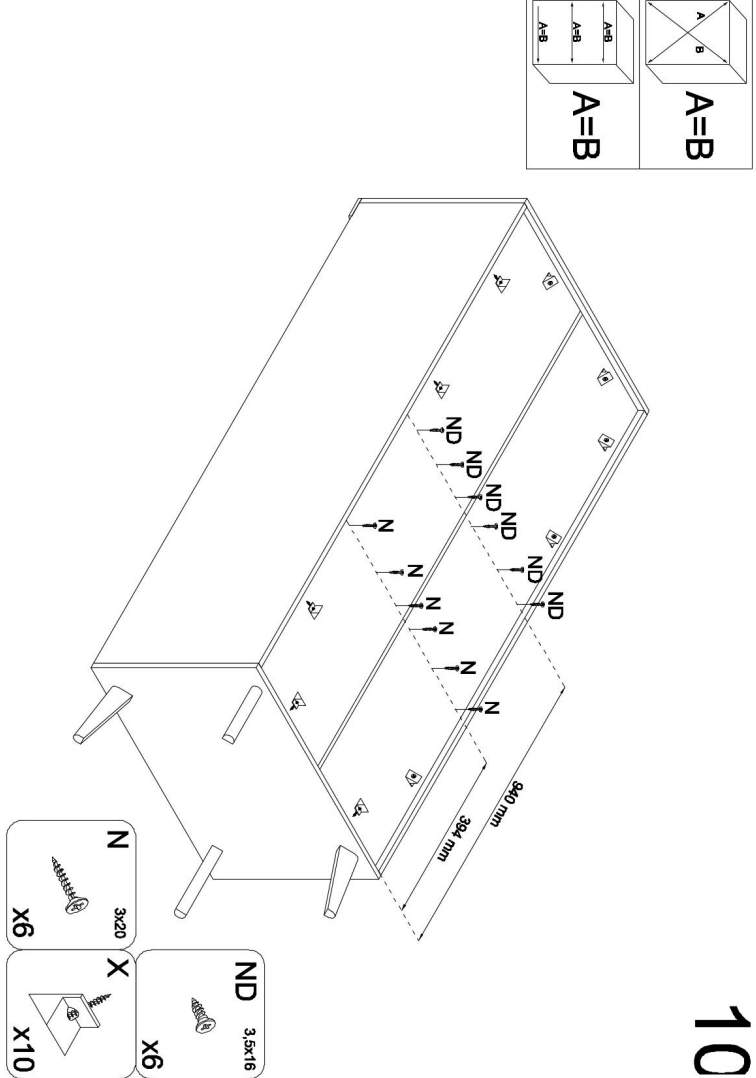


11

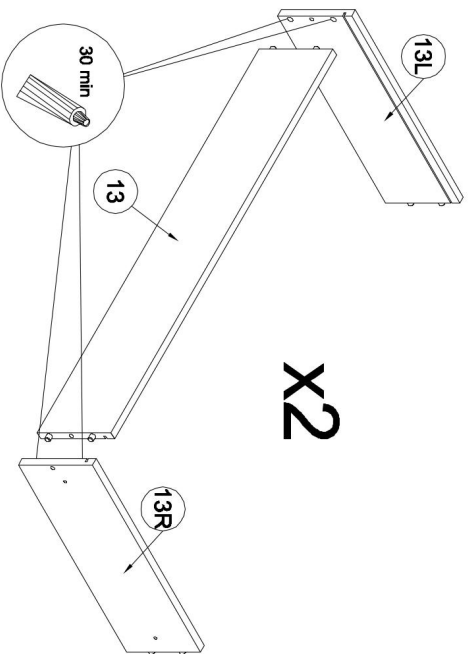

X2




12



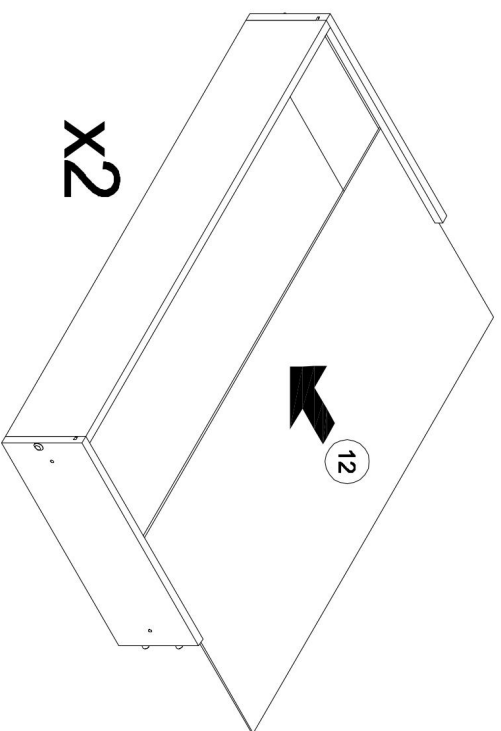


X2




13

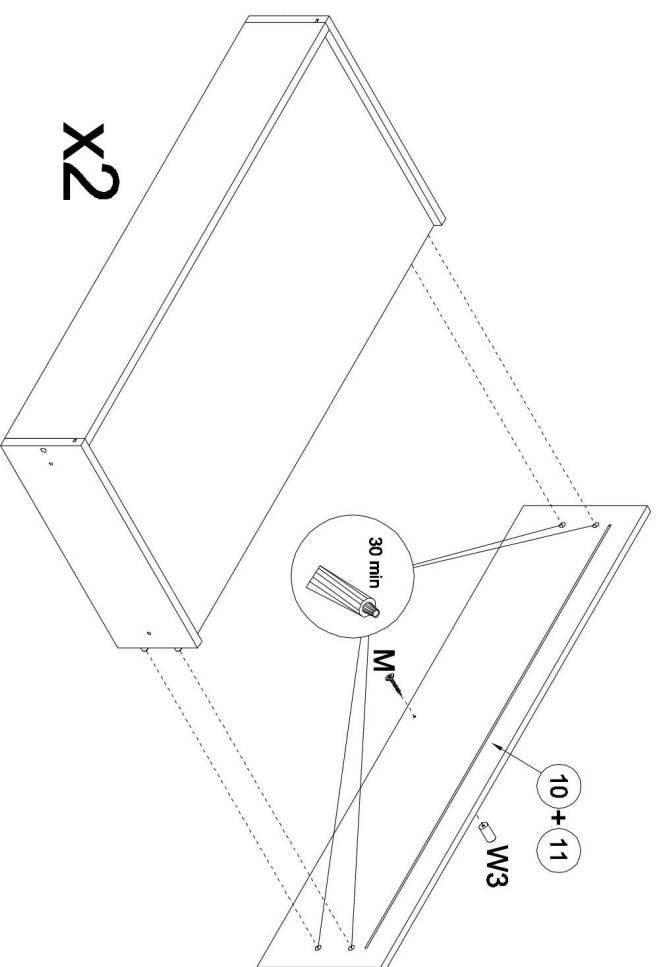






X2

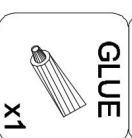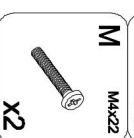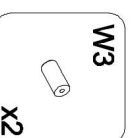

- NA 4x13
- W3 X12
- W3 X2
- M MAx22
- M X2
- PC X2
- PC X6

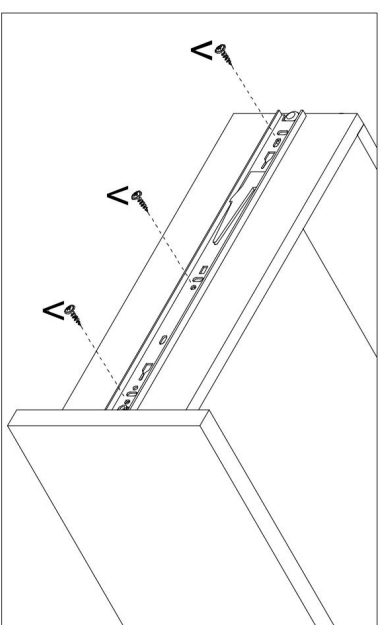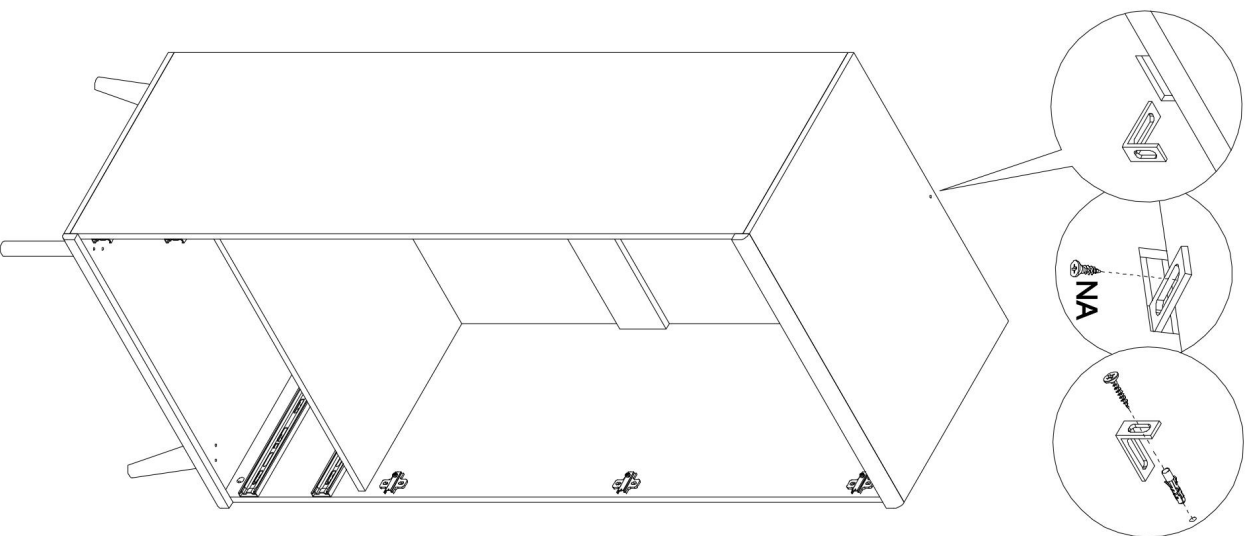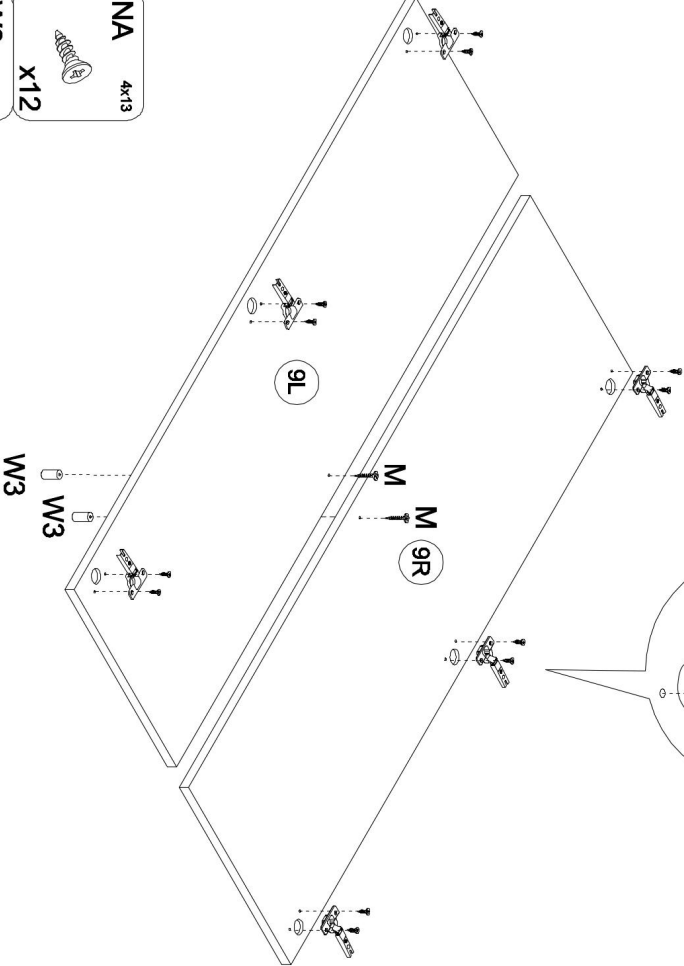

- V 3x13
- TB X12
- TA X1
- TA X1
- NA 4x13
- NA X1

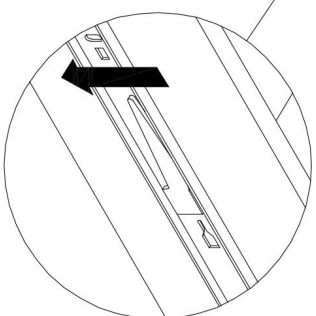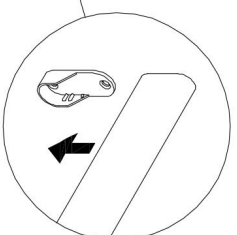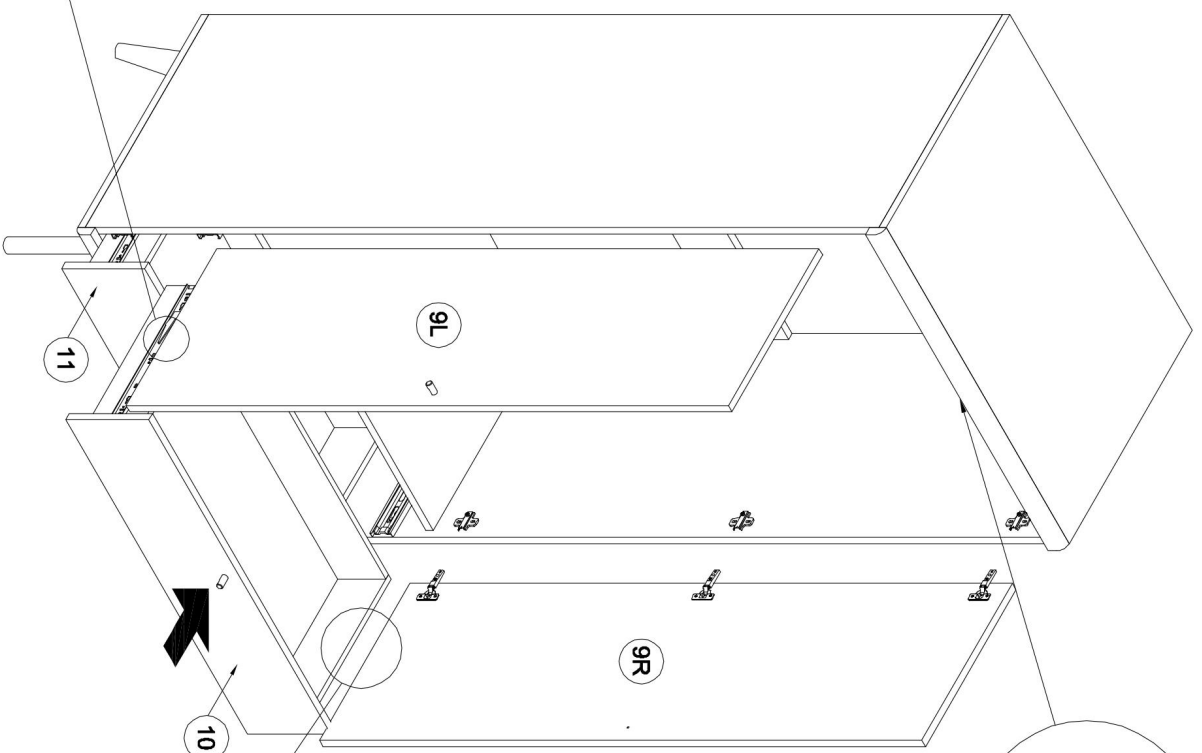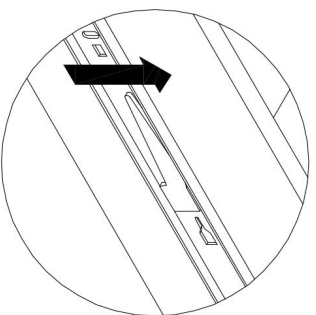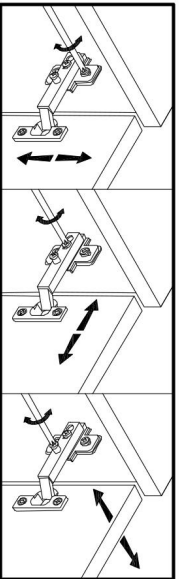

W6 L-760mm
x1